



Ion Lights and Beeping Sounds Meaning

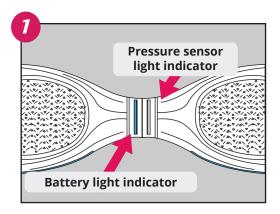


CASE 1:

The pressure sensor light will not glow until both the pressure pads have some weight on them

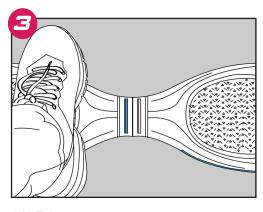


CASE 3:

If there is partial pressure, the light won't glow. You will also hear a beeping sound. This will go away when there is even pressure on the board

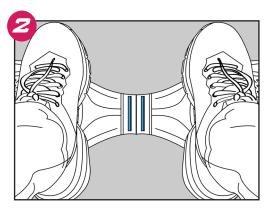

CASE 2:

If there is pressure on both sides and the battery is charged enough, both of the lights will glow

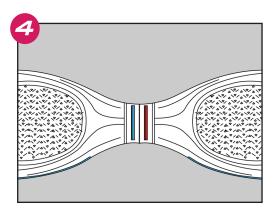

CASE 4:

If the board is turned upside down or lifted when it is turned on, the sensor light will turn red and start beeping. Put pressure on both the rubber pads by standing on them. This will stop the red light from flashing and beeping